

CABLE LOCK

Models: CGL-8, CGL-13, CGL-15
NAD Corporation
Worcester MA

California DOJ

Approved Firearm
Safety Device

WARNING! Please read all instruction before installing this lock.

WARNING! Never attempt to use this type of safety device on a loaded gun.

ALWAYS READ THE OWNERS MANUAL SUPPLIED WITH YOUR FIREARM AND/OR CONTACT THE MANUFACTURER FOR PROPER USAGE.

PREPARE THE FIREARM FOR INSTALLATION OF THE LOCK:

ALWAYS POINT THE FIREARM IN A SAFE DIRECTION.

- Put safety in the "safe" position as instructed in your firearms owner manual.
- Completely unload the firearm as instructed in your firearms owner manual.
- Visually check the chamber, feed and magazine tube, verify the gun is completely unloaded.

INSTALLING THE LOCK ON THE FIREARM:

THIS CABLE LOCK SHOULD BE INSPECTED PRIOR TO EACH USE TO ENSURE SERVICIBILITY. IE: CLEAN, DRY AND FUNCTIONING AS THE FACTORY INTENDED. (The minimum opening to accept the lock cable is 0.30 inches.)

- Turn the key clockwise (until the key stops) to the "unlocked" position.
- To remove the cable from the lock, **HOLD** the key all the way in the "unlocked" position and pull the cable end from the lock body.
- Thread the cable end through the barrel of the gun or through the magazine well as indicated in the **appropriate firearm photo below**. DO NOT operate the action with the lock in place. Damage to the firearm can occur.
- With the key **HELD ALL THE WAY** in the "unlocked" position with one hand, insert the loose cable end all the way (until it stops) into the receiving hole of the lock.
- With one hand holding the cable end **ALL THE WAY** into the lock body, turn the key counter-clockwise to the "locked" position and remove the key.
- **Pull sharply on the cable end to verify the cable is locked.**
- ❖ This safety device is an aid to prevent unwanted access to your firearm.
- ❖ Keys and ammunition should be stored in separate locations.

TROUBLESHOOTING:

- ✓ If the loose cable end does not enter the receiving hole: Make sure you are holding the key **ALL THE WAY** in the unlocked position while you are inserting the cable into the lock.

IF YOU CANNOT REMOVE THE KEY FROM THE LOCK:

- ✓ The key can only be inserted and removed in the completely "locked" position. If the cable end is inserted into the lock body and the key cannot be turned **ALL THE WAY** to the "locked" position and the key removed: the cable end is not fully inserted in the receiving hole of the lock body.

TO CORRECT THE PROBLEM:

- ✓ Turn the key clockwise and **HOLD** the key **ALL THE WAY** in the "unlocked" position.
- ✓ Push the cable end further into the lock body (all the way) and hold the cable end in this position while you turn the key back to the "locked" position. Remove the key.


Through magazine well




**-Bolt action -magazine well opened.
Cable inserted through ejection port
and out magazine well opening.**



**Through magazine well or
ejector port & loading port**

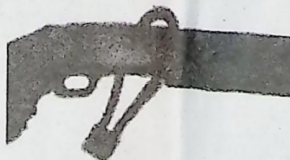

Through barrel or cylinder

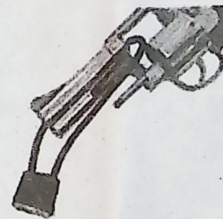

**- Bolt action-fixed magazine floorplate.
Bolt removed – cable inserted through
rear of receiver and out ejection port.**

